

panel blinds

fittings



Brackets 1 per 50cm




UEB brackets
(when requested)
1 per 50cm



UEB additional screw



Assembled headrail

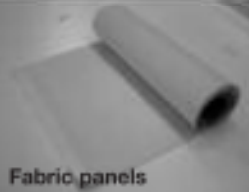

Fabric panels

Cord weight - white

Wand - min 1, max 2
(when required)

Screws and rawl plugs

Bottom bar weights - 1
per fabric panel

fitting instructions

Panel blinds will usually be fitted into the ceiling. Allow enough clearance for any obstructions e.g. window handles. If face fixing is required, attach the UEB brackets to the swivel bracket using the additional screw provided.

Attach the brackets to the wall, ceiling or window frame as required, starting at approx. 7cm from each end of the rail and every 50cm in between. Ensure the correct rawl plugs are used in each situation.

Top fix: Screw the brackets to the lintel or ceiling using screws and appropriate rawl plugs.

Face fix: When using a UEB for face fixing, start by assembling the bracket with the swivel bracket using the supplied screw. Fix the brackets in place (see picture below).



Ensure the headrail is the correct way round, with the lip at the front.



Clip the headrail into the swivel bracket and close the lock.



step one

Pull the panel runners across so they are spread across the width of the headrail. Runner positions are pre-set with a 5cm overlap. First panel overlap may be greater depending on the width of the blind.



For cord option: Hang cord weight onto cord.

For wand option: Fix wand onto the wand carrier on the lead panel runner.



step two

Unroll the fabric panels and begin to attach by Velcro onto each panel runner starting at the front.

To attach the fabric panels to subsequent runners, temporarily separate the runners to give enough space to get the fabric on.



step three

Slide the bottom bar weights into the pocket at the bottom of each fabric panel.



step four

step five

step six

WARNING

IN THE INTEREST OF SAFETY, IT IS ADVISABLE TO KEEP ALL PULL CORDS AND CHAIN/BEAD CORDS OUT OF THE REACH OF CHILDREN.