

pleated blinds


 
fitting instructions

fittings



Top fix brackets:
min 2

2 Screws: min 4
Rawl plugs:
min 4

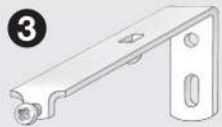


Face fix brackets
(with short screws):
min 2

4 Wood screws:
min 4



5 Blind: 1

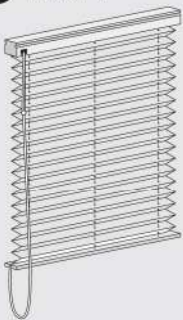


Outside Recess

If fitting the blind outside the window, measurements (C) will need to be the same. To work out (C), simply minus (B) from (A) and divide the answer by two. Follow instructions for FACE FIXING

Inside recess


Decide whether to FACE or TOP FIX. FACE FIX to fit the bracket to the window frame. TOP FIX to the lintel if the window frame is uPVC, or if there are any obstructions, e.g. window handles.

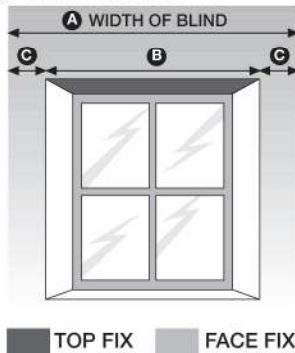

step one


Face Fixing

Lightly screw short screws into place. Position brackets approx 5cm from the ends of the headrail. Mark holes A and screw brackets into place.

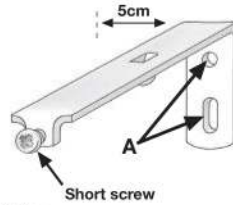

Top Fixing


Measure and mark the distance any handles protrude. Then, using the blind, find and mark the fitting position A. Drill brackets into position 5cm away from the side walls.

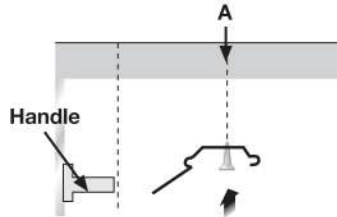

step two


Face Fixing

With cord lock towards you, hook the back of the headrail into the brackets. Tighten the short screws to lock the headrail into place.

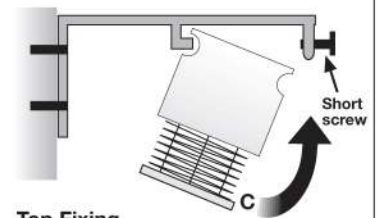


Top Fixing

Tilt and hook the front of the headrail (closest to you) into the bracket. Press the back up into position until it clicks. Push B up to release blind.

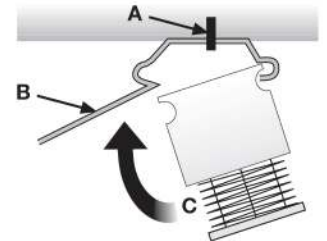

step three

Cord lock

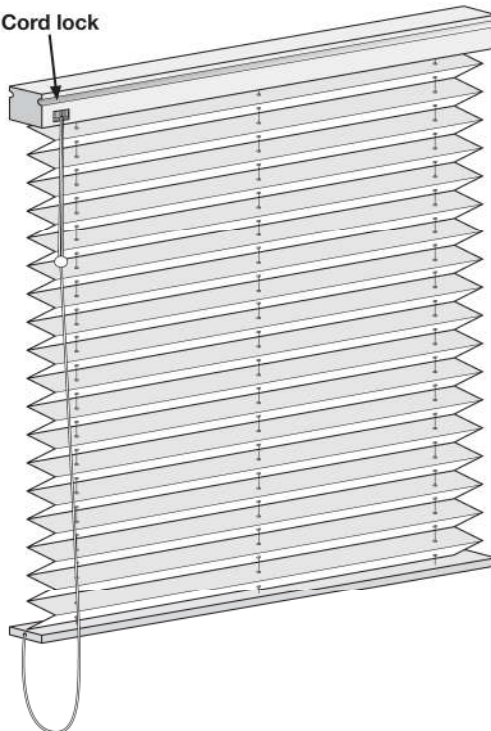


The pleats should now hang freely, with the cord lock positioned at the front of the blind.

step four

To raise and lower the blind use the cord at the side of the blind.

The cord lock will hold the blind at your desired height.

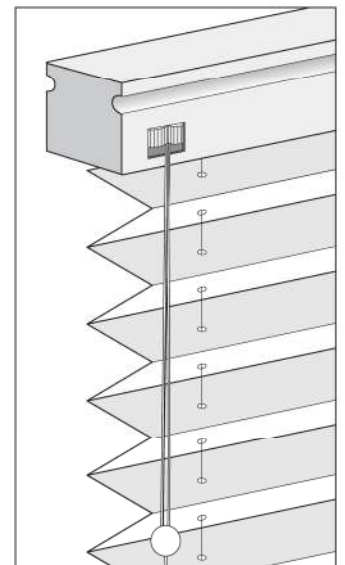

step five

WARNING

IN THE INTEREST OF SAFETY, IT IS ADVISABLE TO KEEP ALL PULL CORDS AND CHAIN/BEAD CORDS OUT OF THE REACH OF CHILDREN.