

Cassette Roller Blinds Fitting Instructions

Fitting Components

Please check you have all the parts required, if any items are found to be missing please get in touch.



Face fix bracket



Top fix bracket

2x top fix or face fix brackets
(larger blinds may have more)



Assembled blind

1

For a blind up to 1 metre wide attach two brackets fitted approximately 75mm (3") from each end of the blind. Any intermediate brackets should be spaced evenly between these.



2

Mark the hole positions before drilling and plugging if necessary. Use two screws in each bracket ensuring that the brackets are level. Remember to allow room for the blind to clear any obstacles when deployed, e.g. door or window handles.

The bracket release lip on the bracket must face the back of the blind.



Release lip



Release lip

3

Offer the blind up to the bracket, tilt the front of the cassette forward and then hook the cassette (second channel in from the valance) into the front of the bracket.



4

Push the headrail cassette upwards and ensure the back of the cassette is locked into the bracket; you should hear a click. Follow the same procedure if face fix fitting.



5

For sidewinder operated blinds; to comply with child safety legislation, a safety hook must be fitted to an adjacent wall for all Roller Blinds with a continuous chain loop to keep the chain taut and out of reach of children.

Put the control chain into the hook at the maximum distance from the control mechanism. Ensure the chain is taut and the hook is at the bottom of the loop.

Screw the hook to a wall adjacent to the blind.



5

For spring operated blinds; release the pin (do not pull all the way out) from the front side of the spring. Your blind has been pre-tensioned and is now ready to operate and will stop at the desired stop position.

