

perfect fit blinds measuring instructions

- 1) Before you begin, ensure there is a 6mm clearance all around the outside of your uPVC window beading to allow space for the Perfect Fit frame to fit.
- 2) Measure the width and drop of the glass area from seal to seal. We recommend you measure from both corners and in the middle of the window. Note down the shortest measurements in millimetres (mm).
- 3) Measure the depth of the window using a depth gauge. If you do not have access to a depth gauge, a ruler or similar rigid object can be placed over the corner of the window frame and a measurement can then be taken down to the glass. This measurement is usually between 18mm-24mm and will determine the size of the fixing brackets you will require.

NOTE: This blind type is unsuitable for windows with astragal bars or windows with square beads (not bevelled or angled).



If you have any questions regarding your sizes, please call on 0800 093 9635

When you have finished measuring, please double check sizes again as we cannot be held responsible for incorrect sizes given.