



roman blinds

fittings

- 1** Brackets: quantity to suit length of blind

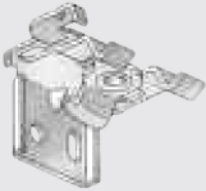


- 2** Cleat & 2 screws
Standard Romans Only

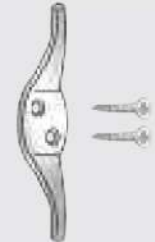


- 3** Wood screws: min 4



- 4** Screws: min 4
Rawl plugs: min 4



- 5** Blind: 1

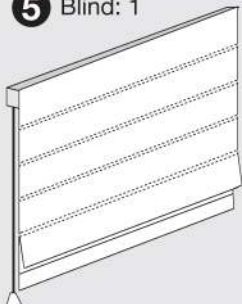


fitting instructions

Outside Recess

If fitting the blind outside the window, measurements **(C)** will need to be the same. To work out **(C)**, simply minus **(B)** from **(A)** and divide the answer by two. Follow instructions for FACE FIXING

Inside recess

Decide whether to FACE or TOP FIX. FACE FIX to fit the bracket to the window frame. TOP FIX to the lintel if the window frame is uPVC, or if there are any obstructions, e.g. window handles.

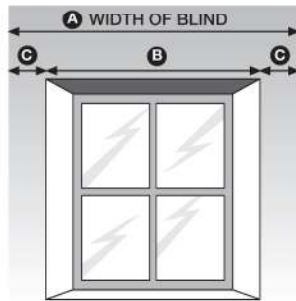

TOP FIX FACE FIX

Place blind in fitting position. **The two brackets differ in size.** To fit the brackets for a Standard Roman blind leave a 7cm clearance at either end of the rail to prevent interference with cord supports. To fit the brackets for a Deluxe Roman blind leave a 3cm clearance at either end of the rail to prevent interference with control mechanism. Always ensure brackets are evenly spaced across the headrail.




B Possible bracket positioning

step two


Top Fixing

Measure the distance that any handles protrude from the frame, **A**. Mark this measurement on the lintel and use it to position the back of the bracket. Mark the position of holes **B** and screw bracket to lintel using screws and rawl plugs supplied.

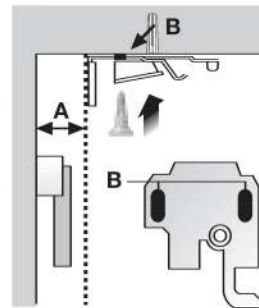


Face Fixing

Position bracket with swing arm facing towards you, and mark holes **B**. Screw bracket in place. Use rawl plugs if fitting to the wall.

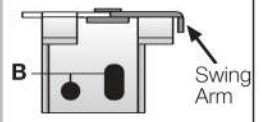


step one

Push swing arm anti-clockwise as far as it will go. Now clip the blind over the bracket, first easing the front lip of the headrail **A** in to place.

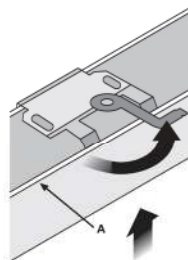


Push swing arm clockwise until it locks in to place, firmly holding the blind headrail.

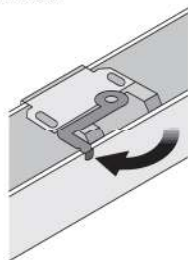

step four

Standard Romans Only

Fix the cleat to the frame or wall in an easy-access position. Screw cleat into place using the screws supplied

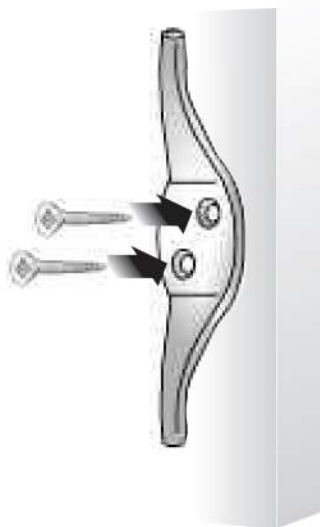


step five

step three

The fabric of the Roman blind attaches to the headrail with Velcro.

Standard Romans Only

Pull side cords to open the blind, and tie them to the cleat to keep the blind raised.

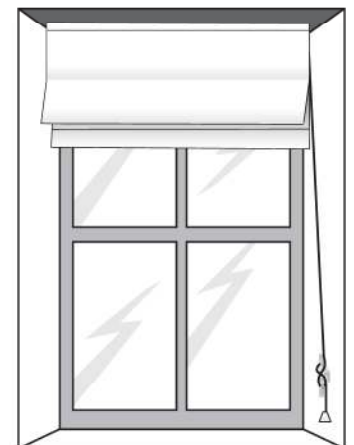

step six

WARNING

IN THE INTEREST OF SAFETY, IT IS ADVISABLE TO KEEP ALL PULL CORDS AND CHAIN/BEAD CORDS OUT OF THE REACH OF CHILDREN.