

# woodweave blinds

## fitting instructions

### fittings


- 1** Brackets: quantity to suit length of blind



- 2** Wood screws: min 4



- 3** Screws: min 4  
Rawl plugs: min 4



- 4** Blind: 1




### Outside Recess

If fitting the blind outside the window, measurements **(C)** will need to be the same. To work out **(C)**, simply minus **(B)** from **(A)** and divide the answer by two. Follow instructions for FACE FIXING

### Inside recess

Decide whether to FACE or TOP FIX. FACE FIX to fit the bracket to the window frame. TOP FIX to the lintel if the window frame is uPVC, or if there are any obstructions, e.g. window handles.

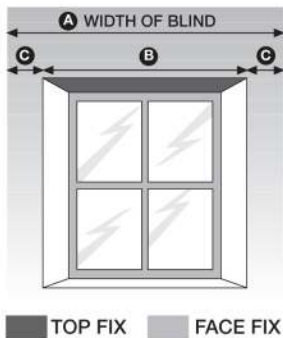

### step one

Place blind in fitting position. Space the brackets evenly.




### step two

#### Top Fixing


Measure the distance that any handles protrude from the frame, **A**. Mark this measurement on the lintel and use it to position the back of the bracket.

Choose one of the slots cut into the headrail closest to the cordlock and measure the distance from the end of the blind. Use this dimension as a guide to the bracket position and fix a bracket. Repeat the process using a slot that's a similar distance from the other side of the blind.

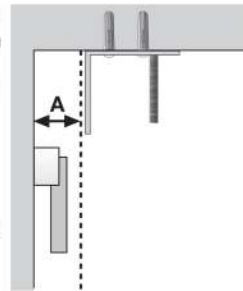

#### Face Fixing

Choose one of the slots cut into the headrail closest to the cordlock and measure the distance from the end of the blind. Use this dimension as a guide to the bracket position, and fix a bracket. Repeat the process using a slot that's a similar distance from the other side of the blind.

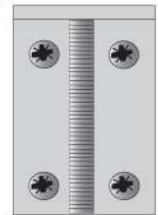

### step three


Offer the blind up to the brackets ensuring the locating pin shows through the slots, and attach wing nut while supporting the blind.



### step four

To raise the blind, pull the cords down until the blind reaches your desired height.

To lower the blind, pull the cords across the face of the blind to release the cordlock and carefully let the cords slide through your fingers.

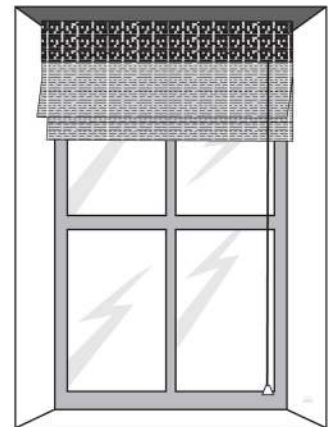

### step five