



roller blinds measuring instructions

Inside Window Recess (Recess)

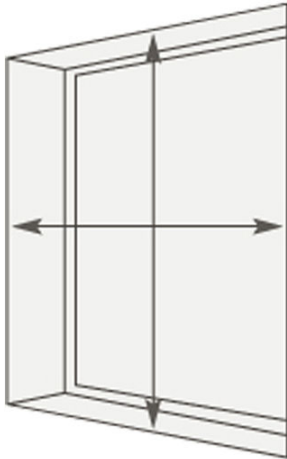

- 1) Measure the width of the recess from wall to wall in three places. Note down the shortest measurement in millimetres (mm).
- 2) Measure the drop by taking the measurement from the top of the recess to the window sill in three places. Note down the shortest measurement in millimetres (mm).
- 3) Enter these measurements into our website as RECESS. We will make the necessary allowances for you.

Outside Window Recess (Exact)

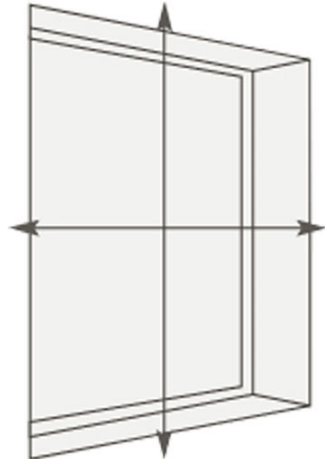

- 1) Measure the exact width of where you would like your blind to be installed as shown. Note down this measurement in millimetres (mm). We recommend overlapping a window opening by at least 50mm on both sides.
- 2) Measure the exact drop from the top of where you would like the blind to be installed to the bottom as shown. Note down this measurement in millimetres (mm). We recommend overlapping a window opening by at least 50mm on both sides.
- 3) Enter these measurements into our website as EXACT. We will make your blind to exactly this size.

Important Note when Measuring for Roller Blinds

When measuring for Roller Blinds, please note the finished fabric width will be 33mm less for a recess measurement and 28mm less for an exact measurement.

If you have any questions regarding your sizes, please call on 0845 4379 631

When you have finished measuring, please double check sizes again as we cannot be held responsible for incorrect sizes given.