



vertical blinds measuring instructions

Inside Window Recess (Recess)

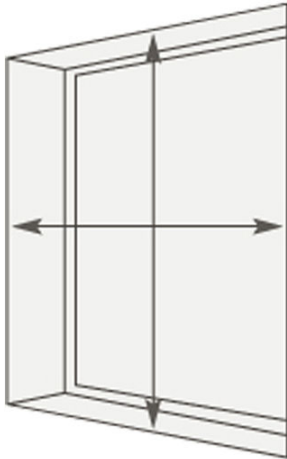

- 1) Measure the width of the recess from wall to wall in three places. Note down the shortest measurement in millimetres (mm).
- 2) Measure the drop by taking the measurement from the top of the recess to the window sill in three places. Note down the shortest measurement in millimetres (mm).
- 3) Enter these measurements into our website as RECESS. We will make the necessary allowances for you.

Outside Window Recess (Exact)

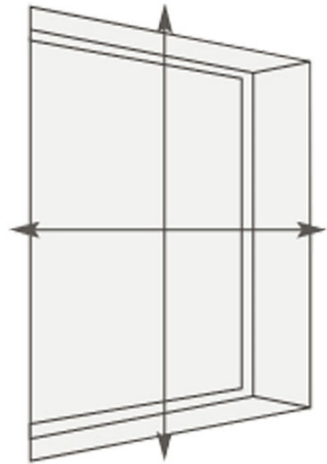

- 1) Measure the exact width of where you would like your blind to be installed as shown. Note down this measurement in millimetres (mm). We recommend overlapping a window opening by a least 50mm on both sides.
- 2) Measure the exact drop from the top of where you would like the headrail to be installed to the bottom as shown. Note down this measurement in millimetres (mm). We recommend overlapping a window opening by a least 50mm on both sides.
- 3) Enter these measurements into our website as EXACT. We will make your blind to exactly this size (including headrail).

Important Note when Measuring for Vertical Blinds

When measuring for Vertical Blinds from an existing blind, please measure from the top of the headrail to the bottom of the fabric and order as EXACT. We will make an allowance to the louvre length to allow for the headrail supplied with your blind.

If you have any questions regarding your sizes, please call on 0845 4379 631

When you have finished measuring, please double check sizes again as we cannot be held responsible for incorrect sizes given.