

Perfect Fit Roller Blinds Fitting Instructions

Fitting Components


Please check you have all the parts required, if any items are found to be missing please get in touch.




2x sections of side frame



4x brackets (larger blinds may have more)

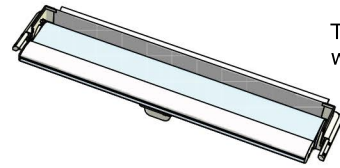

Top section of frame with blind attached.

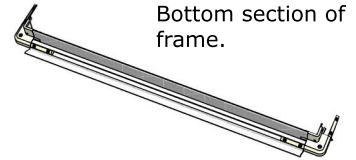

Bottom section of frame.

1

Join the side sections of frame to the bottom section of the blind.




2

Join the side sections of frame to the top section of the blind to complete the blind assembly.



3


Slide the fixing brackets under the rubber gasket to align with the punch holes on the Perfect Fit frame.

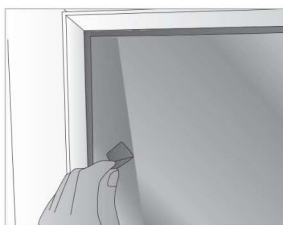

Top Tip: To align the brackets perfectly, hold the assembled blind at the window and with a pencil mark on the window frame the punch hole locations. This will then be the fitting point for the brackets.

4

Fix the assembled blind to the installed brackets by pushing in to place. The brackets will locate through the frame punch holes to secure the blind.

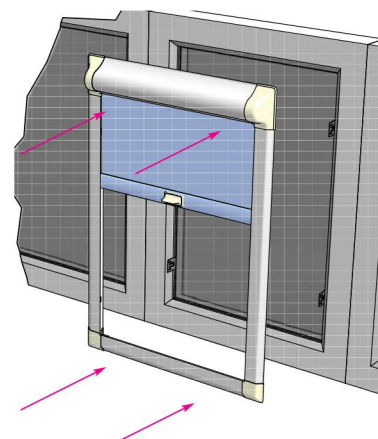

Operating your Perfect Fit Roller Blind

The blind bottom bar end caps slide in the frame channel furthest from the glass. To raise and lower the blind, tilt the bottom bar backwards and to lock the blind tilt the bottom bar back forwards.