

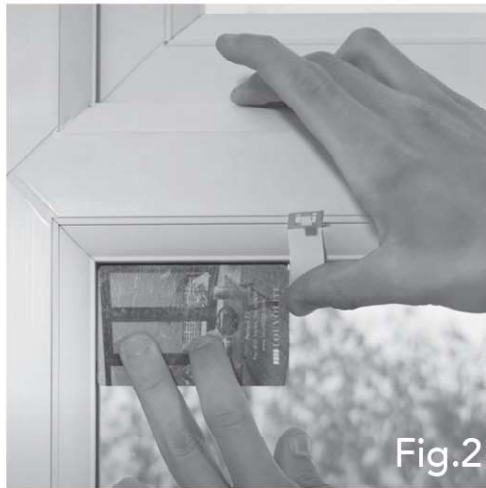


PERFECT FIT SHUTTER FITTING INSTRUCTIONS

INSTALLING PERFECT FIT SHUTTER

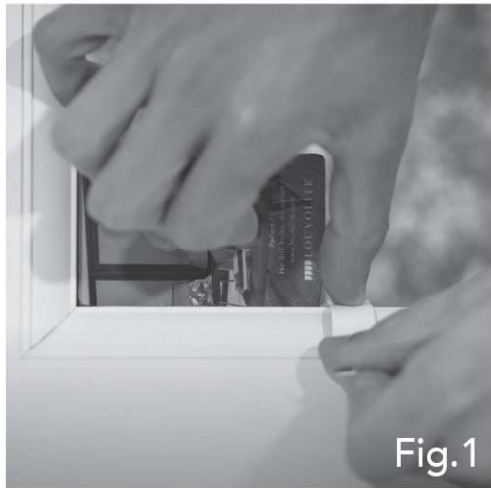

1. Using a credit card as a guide slot a bracket into the corner of each gasket seal on the bottom window. (Fig.1) (Fig.2) Repeat for the top window. (Fig.3)

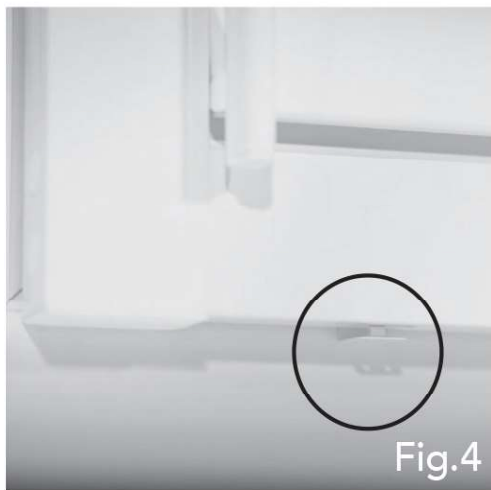

2. Once all brackets are in place the shutter is ready to be installed. Line the cut out in the bottom of the frame with the bottom brackets. (Fig.4)
3. Once the bottom of the frame is clipped in, push the top side of the frame into the top brackets. (Fig.5)
4. Repeat steps 1-3 for the top window. (Fig.6)
5. Your Perfect Fit Shutter is now installed.